


SERENITY™

Shower Drain For Tile Base

(Trim Models 102, 152, 202, 252)

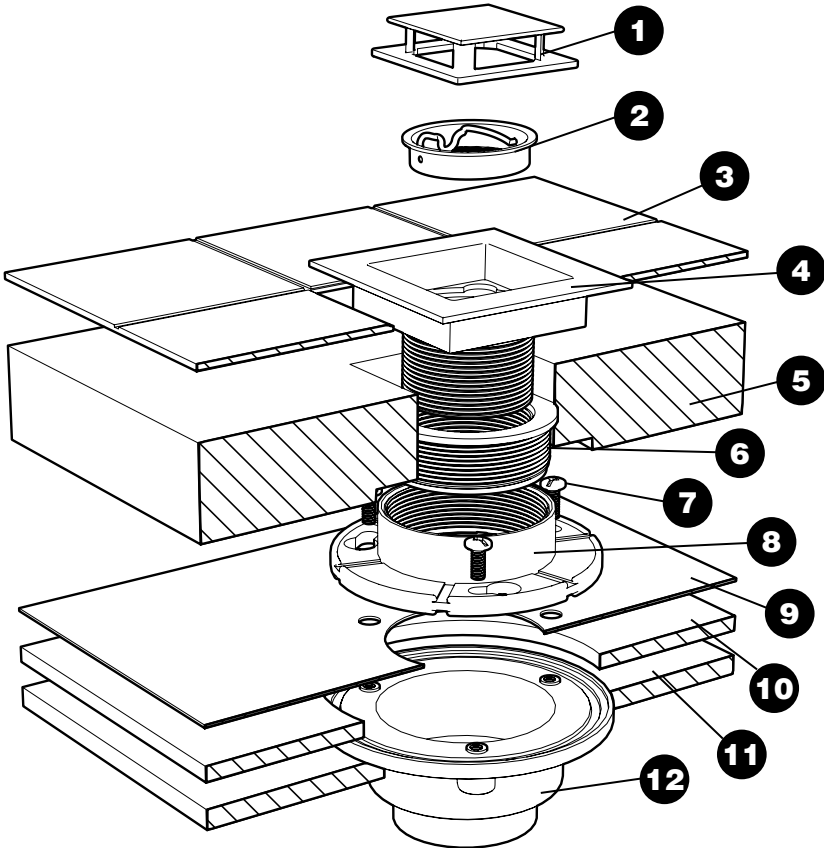

1. Trim Insert

/ *Couvercle*

2. Haircatcher

/ *Receveur de Cheveux*

3. Floor Surface

/ *Surface de plancher*

4. Trim Body

/ *Dessus (non inclus)*

5. Mortar Bed

/ *Plancher en béton*

6. 3"x2" Threaded

Adaptor

/ *Adapteur 3"*

7. Screws / Vis

8. Reversible Collar /

Collier réversible

9 Sheet Membrane /

Membrane en feuille

10. Bed Slope /

Pente

11. Substrate /

Substrat

12. Underbody


(sold separately) /

Sous Corps (non

inclus)



Shower Drain For Molded (Preformed) Base (Trim Models 100 & 150 only)

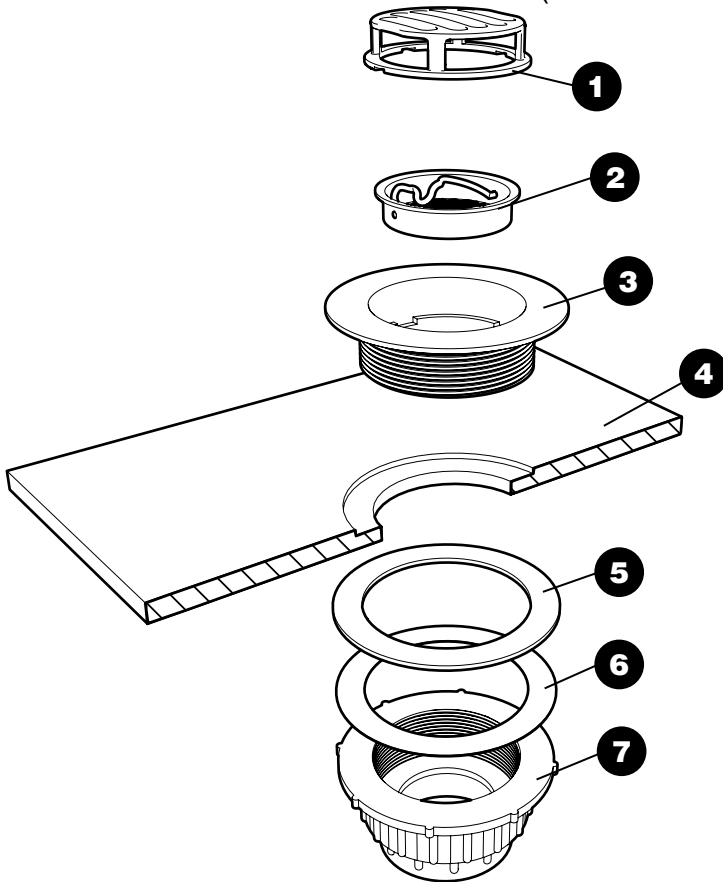

- 1. Trim Insert / *Couvercle*
- 2. Haircatcher /
Receveur de Cheveux
- 3. Trim Body / *Dessus*
- 4. Shower Base
/ *Base de douche*

- 5. Rubber Washer
/ *Rondelle de caoutchouc*
- 6. Fiber Washer
/ *Rondelle de fibre*
- 7. Underbody (sold separately) /
Sous Corps (non inclus)

FM-SERTRIM

